

CAMPING WORLD

RV TIRE CHANGING GUIDE

- ☐ Retrieve your spare tire. RV manufacturers mount spare tires in different locations, so consult your owner's manual if you're having trouble locating yours.
- ☐ Place wheel chocks in front and back of tires you aren't changing to keep your RV from moving.
- ☐ Use your lug wrench to loosen all lug nuts holding the tire in place.
- ☐ Place the bottle jack under your RV's frame.
- ☐ Extend the bottle jack until the tire is completely off the ground and high enough to install the inflated spare tire.
- ☐ Use your impact driver and socket to remove wheel lugs.
- ☐ Remove the blown tire and set it aside.
- ☐ Center the spare tire on the lug threads.
- ☐ Replace wheel lugs by hand (at least get them started by hand to avoid cross-threading).
- ☐ Initially tighten lug nuts with the impact driver.
- ☐ Retract the bottle jack to lower the tire onto the ground.
- ☐ Tighten lug nuts entirely with your torque wrench. All manufacturers recommend lug nuts be tightened to a specific torque setting. Consult your owner's manual and use a torque wrench to tighten lug nuts to spec.
- ☐ Use your tire gauge to check the pressure in your spare tire.
- ☐ If necessary, inflate your tire to the recommended PSI.
- ☐ Remove wheel chocks.
- ☐ Store the blown tire safely until you acquire a new spare.
- ☐ Store all your tire-changing tools.

Technician Tip: Driving your RV without a spare in tow isn't recommended. If you've had to install a spare, you should replace the original tire as soon as possible before continuing your trip.



[Find a Tire or Service Center](#)